



**FIGURE 6**  
**SENSOR ORIENTATION**

The tension sensor may be mounted in any position or orientation as long as the direction of force is maintained as shown above. The angles of deflection ( $\alpha 1$  and  $\alpha 2$ ) should be approximately equal, referenced to the sensors direction of force.